

PART NO. 50-507

INSTRUCTION SHEET

SWITCH WIRING HARNESS



WIRING

MIDDLE RED WIRE to battery post on remote solenoid or starter

OUTSIDE RED WIRE to starter post on solenoid

BLACK WIRE goes to positive side of coil, OR:
WHEN USING a multi-spark distribution box, the
black wire connects to switched power to box (small red).



REV.10-24

⚠ WARNING: This product can expose you chemicals including lead, which is/are known to the state of California to cause cancer, birth defects or other reproductive harm. For more information, go to: www.P65Warnings.ca.gov



www.quickcar.com
1-800-997-7333

170 Business Park Dr,
Lebanon, TN 37090