INSTRUCTION SHEET




OFF ROAD ROCKER SWITCH PANEL

QuickCar Panel is designed to mount into a 6-1/4" x 2" rectangular hole. Secure by mounting the panel using the (4) #10 holes on each corner of the panel.

IMPORTANT: Before mounting, ensure that the battery is disconnected from the vehicle to avoid injury.

WIRING

- Black Wire: To clean chassis ground, this should be a bolt or stud welded to the chassis.
- Heavy Red Wire: To +12V positive post on battery or battery disconnect switch.
- White Wire: To relay or solenoid pole for outward pull for winch.
 - *White wires may need to be swapped depending on polarity.

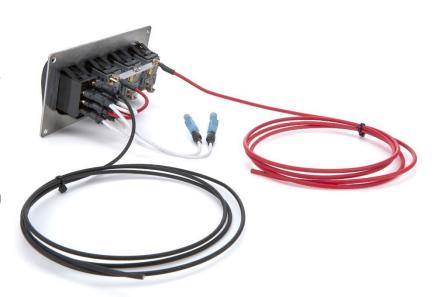

Tech Tip: When routing wires through any firewall or hole, use a rubber grommet to prevent damaging the wire. This can help to avoid short circuits and failures. This panel comes with ring terminals and heat shrink to allow proper terminal connections.



REV. 11-24

MARNING: This product can expose you chemicals including lead, which is/are known to the state of California to cause cancer, birth defects or other reproductive harm. For more information, go to: www.P65Warnings.ca.gov

